Doc Number:SAA09FY121-002 Revision:A

Electronic Signature Approval

10 TON BRIDGE CRANE AT THE VAB/LOW BAY AREAS K&L CHECKOUT CELLS 1,2 & 4

Release Date: nulldate

DRA Combo: Version: 2.0

Role:	Signed by:		Date (GMT): Reason for signing:
Administrative	Babiarz Laura L United Space Alliance LLC 54530 Mail:USK-291 Phone:321/861-9 Documentum User Name : Babiarz Laura L	098	02/23/2007 15:24: Document has been Approved
	Mail: Phone: Documentum User Name :		
	Mail: Phone: Documentum User Name :		
	Mail: Phone: Documentum User Name :		
	Mail: Phone: Documentum User Name :		
	Mail: Phone: Documentum User Name :		

SYSTEM ASSURANCE ANALYSIS

OF THE

10 TON

BRIDGE CRANES

AT THE

VAB LOW BAY

CHECKOUT CELLS 1, 2 & 4

BASELINE NO.: 389.00 PMN: K60-0531



Revision Log

Rev.	Description	Date
New	This SAA cancels and supercedes SAA09FY12-003. Upgraded criticality of Cell 2 & 4 cranes to perform Crit. 2 and 1 functions respectively.	6/3/91
Α	Incorporated EO1 thru 4. Added final upper limit switches to all three hoists per CCBD 115451. Deleted FMN: 002.003 and .004. Removed suspended load tise.	2/7/07

Prepared By:

When 2/13/0)

Technical Concurrence:

2-14-07

M. Gross, USA 54530

Mission Assurance Engineer

S, Kugelmann, USA 55120 System Design Engineer

Process Concurrence:

Sacht. Barnette 2/14/0 J. Barnette, USA 54530 Technical Concurrence:

2-12-00)

First Line Manager,

Reliability Engineering

Roberto Galinanes, USA 56810

Systems Engineer

Process

Concurrence:

Technical

/ ^

2/13/07

T. Parnell, NASA SA-B1

Safety Engineering & Assurance

L. Jones, NASA NE-M9 Systems Engineer

Approval:

J. McLean, USA 54500

ø. MCLean, USA 54

Manager,

Mission Assurance

See the Electronic Signature Page for Digital Release Approval

TABLE OF CONTENTS

1 SYS	STEM ASSURANCE ANALYSIS SUMMARY	4
1.1	FINDINGS	
1.2	AREAS OF CONCERN	
1.3	DOCUMENTATION LIST	4
2 SYS	STEM DESCRIPTION	4
2.1	GENERAL	
2.2	MAIN HOIST ASSEMBLY	
2.3	TROLLEY DRIVE ASSEMBLY	
2.4	BRIDGE DRIVE ASSEMBLY	
2.5 2.6	EMERGENCY STOP	
2.0	ISOLATED CRANE HOOK ASSEMBLY	
2.8	ANALYSIS OF GEARBOX, SHAFT, AND GEAR RETENTION METHODS	
	ALYSIS GROUNDRULES	
4 FAI	LURE MODES AND EFFECTS ANALYSIS	8
4.1	CRITICALITY ASSESSMENT AND END-TO-END ANALYSIS	8
4.2	FMEA WORKSHEETS	
4.2.1	· · · · · · · · · · · · · · · · · · ·	
4.2.2	•	
4.3	COMPUTER INTERFACE ANALYSIS	10
Appendix A	A. FAULT TREE AND HAZARD ANALYSIS	
Appendix E		
	LIST OF ILLUSTRATIONS	
Figure 1.	VAB Cell 1, 2 & 4 10 Ton Cranes	11
	LIST OF TABLES	
Table 1.	Finding Summary	4
Table 2.	Criticality Assessment Worksheet – K60-0531	9
	Passive Component List	
	MECHANICAL FMEA – VAB Low Bay Checkout Cells 1, 2 and 4	
	ELECTRICAL FMEA - VAB Low Bay Checkout Cells 1, 2 and 4	
rabie 6.	Hazard Analysis Worksheet - VAB Low Bay 10 Ton Cranes	A-3

1 SYSTEM ASSURANCE ANALYSIS SUMMARY

1.1 FINDINGS

Table 1. Finding Summary

	<u>Assessment</u>
Reliability Criticality	Critical
Safety Criticality	Critical

	<u>Type</u>	<u>Quantity</u>
Critical Items	1	-
	1S	-
	2	33
1R Non-CIL Items	1R	-
Critical Flexhoses	1S	-
	2	-
Critical Orifices	1S	-
	2	-
Critical Filters	1S	-
	2	-
Hazard Reports	Accepted Risk	-
	Controlled	-

1.2 AREAS OF CONCERN

There were no Areas of Concern identified with this system.

1.3 DOCUMENTATION LIST

Document/Drawing No.	<u>Rev</u>	Outstanding EOs or Changes	<u>Title</u>
79K16767	С	-	VAB Low Bay, Cell 1, 2 & 4 10 Ton Bridge Crane
80K16827	-	-	Mechanical Arrangement 10 Ton Bridge Crane Low Bay Cells 1, 2 & 4, VAB

2 SYSTEM DESCRIPTION

2.1 GENERAL

The double girder, double rail, 10-ton bridge cranes were manufactured by Heco-Pacific Manufacturing, Inc., Union City, California, 94587. The cranes have a 49-foot span. The lowest point of the bridge structure is 40 feet above the floor of the VAB/Low Bay Areas K & L.

The cranes consist of three subsystems - hoist, trolley, and bridge. The components are electrically actuated by 3-phase, 60-hertz, 480 volt alternating current (VAC) motors. Control power is 110V ac provided through a standard push-button-equipped crane control pendant, which provides for five motor speeds. The crane

control pendant is suspended from the bridge structure via a retractable balance reel. This allows the pendant to be adjusted to a convenient height or distance from the bridge center, clear of wide loads.

The bridge travels on horizontal rails for a distance of 49 feet in an eastwest direction at speeds of 0 to 25.16 F.P.M., 5 speed variable.

The trolley is driven directly by drive wheels via a cross-shaft running on rails mounted on the bridge. The trolley travels the length of the bridge in a north-south direction, at speeds of 0 to 9.96 F.P.M., 5 speed variable. The trolley carries with it the complete hoist mechanism.

The hoisting mechanism consists of wound-rotor, variable-speed main motor, reduction gears, a brake, a rope winding drum, a two-sheave lower block, a single-sheave equalizer pulley, a steel hoisting rope, bearings and couplings. Hoisting height (hook travel from lower to upper limits) is 40 feet at 0 to 9.45 F.P.M., 5 speed variable.

All three cells (1, 2 and 4) are to be used in a contingency basis. Prior use of these cells were for processing SSMEs (cell 2 and 4) and the EDO pallet (cell 1). The cells were upgraded per CCBD 115451 to install a final upper limit switch to meet NASA-STD-8719.9.

2.2 MAIN HOIST ASSEMBLY

This assembly lifts, holds and lowers the load suspended from the load hook. The unit consists of a wire rope drum, and electric driving motor, a gear reducer, an electric brake and a load brake, assembled as an integral unit along a common axis. The main hoist assembly is mounted onto a horizontal trolley, consisting of four wheels engaged into lateral bridge beam rails. The electric motor provides torque to the wire rope drum by way of a gear reducer.

A spring engaged, shoe-type motor brake is mounted at the opposite end of the drive pinion shaft. The motor brake is normally set due to spring compression and is electrically released whenever power is applied to the motor. A Weston screw-type mechanical load brake controls the lowering speed of the hoist and provides load holding ability in the event of failure of the motor or motor brake. The load brake assembly is activated while raising and lowering the load. During lowering, the action of the motor is opposite to that of the load and tends to release the brake. When the brake pressure is decreased sufficiently by the motor, the load descends. If the speed of the load begins to exceed that of the motor, the brake sets. The lowering speed is therefore always controlled by the speed of the motor.

2.3 TROLLEY DRIVE ASSEMBLY

The purpose of this unit is to move the main hoist assembly laterally across the width of the test cell on the bridge beam rails. This is accomplished by applying torque to one of the trolley wheels. The assembly consists of an electric motor, an electric brake, a gear reducer assembly and a gear drive assembly. The motor is reversible and, therefore, able to drive the trolley in either direction. The drive pinion of the gear drive assembly operates against the motor gear, which is keyed directly to the trolley wheel.

The electric brake is spline-mounted to the motor shaft. When the motor is de-energized the brake solenoid also becomes de-energized, allowing the brake spring to engage the brake and hold the trolley.

2.4 BRIDGE DRIVE ASSEMBLY

The purpose of this unit is to move the main hoist assembly laterally across the length of the test cell on the bridge rails. This is accomplished by applying torque to two of the four bridge beam wheels. The assembly consists of an electric motor, an electric brake, a gear reducer, and a gear drive.

The motor is reversible and, therefore, able to drive the bridge beams in either direction. The drive pinion of the gear drive assembly operates against the drive gear, which is keyed directly to the bridge wheel shaft. The bridge wheel shaft extends the length of the bridge beams and is connected at either end to the drive wheels.

The electric brake is spline-mounted to the motor to the motor shaft. When the motor is de-energized the brake solenoid also becomes de-energized, allowing the brake spring to engage the brake and hold the bridge beams.

2.5 PUSH-BUTTON CONTROL PENDANT

The control pendant manufactured by the Duct-O-Wire Company of Corona Calif. has four 2 button push button switch modules identified as follows:

Main Line Power	Start Stop
Hoist	Raise Lower
Trolley	Right Left
Bridge	Forward Reverse
Up Limit	Bypass Normal

The three push button switch modules operating the hoist, bridge and trolley are five speed and control the relay logic of the resistor banks to the three wound-rotor AC motors powering the hoist, bridge and trolley.

2.6 EMERGENCY STOP

The Crane is equipped with an emergency stop independent from the operator-controlled pendant.

2.7 ISOLATED CRANE HOOK ASSEMBLY

The Crane Hook is an electrically insulating type hook manufactured by Miller Manufacturing Co. As installed, the hook serves to help minimize the probability of stray voltages contacting sensitive loads. The hook is designed to maintain its isolation characteristics to 50,000 volts maximum. The hook is also fitted with a ground stud for further stray voltage protection when connected to facility ground system. In addition, this hook has a safety factor of 5 to 1.

2.8 ANALYSIS OF GEARBOX, SHAFT, AND GEAR RETENTION METHODS

As a point of special concern for the safety of sensitive loads, the design integrity of hoist gearboxes was carefully reviewed for failure modes that, if they should occur, could cause or contribute to dropping a load. The particular failure modes under scrutiny are:

The ability of a gear to slip out-of-mesh with its associated gear or structural failure of a gear possibly caused by:

- a. The gear itself slipping axially along the shaft.
- b. The shaft with gear firmly fixed thereon slipping axially out-of-alignment.
- c. Broken gear teeth or complete destruction of a gear.

The effect of such a failure occurrence would result in the load being dropped possibly causing loss of life and/or damage to the load. Neither the mechanical load brake nor the hoist motor brake could prevent a

load from being dropped under the above conditions because the affected gears are located between the brakes and rope drum.

The hoist gearbox consists of five spur gears. They are the driving pinion , the high speed gear, the intermediate pinion, the intermediate gear and pinion and the slow speed gear. The driving pinion is integrally machined on a spline shaft running through the rope drum output shaft. Hoist motor torque is transmitted from the motor through the wire rope drum by a drive shaft. The hoist motor brake is splined to the opposite end of the driving pinion shaft. The driving pinion meshes with the high speed gear. The high speed gear is part of the mechanical load brake assembly, along with the ratchet, ratchet disc, and intermediate pinion.

The intermediate pinion is an integral part of the mechanical load brake shaft that also includes the acme screw threads on which the high speed gear is threaded. Torque from the hoist motor and the load applied to the screw thread compress the ratchet between the high speed gear and the ratchet disc providing braking friction when the ratchet pawl engages the ratchet during lowering. The intermediate pinion meshes with the intermediate gear of the intermediate gear and pinion. The intermediate pinion of the intermediate gear and pinion meshes with the low speed gear. The low speed gear is splined to the drum shaft. The wire rope drum is splined to the drum shaft.

Axial slippage of gears and shafts are prevented by shoulders and the overlap of the gears themselves within the confined space of the gearbox. Bearings are supported by cups within the gearbox case structure and are retained in place by snap rings. There is insufficient space within the gear case to allow gears to slip out of mesh with each other or a shaft to pull free from a bearing.

The wire rope drum is mounted in the chassis such that drum bearing failure will not cause the load to drop. End-to-End chassis to drum clearance is insufficient to allow axial movement along the drum shaft so that the drum drive shaft will disengage from the drum.

3 ANALYSIS GROUNDRULES

This analysis has been developed in accordance with NSTS 22206 and NSTS 22254.

The following additional groundrules and assumptions were used during this analysis:

a. The hoist has a 5 step speed selection as follows:

SELECTION	SPEED
1ST	Static Load Holding, No Movement
2ND	< 1 FPM
3RD	4.56 FPM
4TH	7.75 FPM
5TH	9.12 FPM

There are failures that could occur where a contact could fail closed allowing the hoist to go into a higher speed bypassing a slower speed. Going from 1st speed to 4th speed if the contact for 4th speed failed closed. However the speed differentials are so close together that a jump to a higher speed will not be noticeable. Therefore, this will not be a cause for the load to move uncontrollably causing damage to flight hardware if it were in close proximity to an object.

4 FAILURE MODES AND EFFECTS ANALYSIS

4.1 CRITICALITY ASSESSMENT AND END-TO-END ANALYSIS

Pages 9 to 9 Table 2. Criticality Assessment Worksheet - K60-0531 System/Subsystem: VAB Low Bay Checkout Cells 1, 2 and 4 Bridge Cranes Baseline Number: 389.00 **Location:** VAB Low Bay Effect of Loss/Failure Crit/ Time Input/ If Function Fails to Operate or Cease Operation on Time, Fails Output **Function** Period **Noncrit Notes** During Operation, and/or Prematurely Operates **Input Electrical Power** Provide power to As required Power failure would cause a delay in processing. NC See SAA09ELR2-001 move the hook. trolley and bridge. **Operator Inputs** Controls the bridge As required Failure to control the crane properly during operation С See Hazard Analysis trolley and hook. could damage to a vehicle system. **Output** Force Motion Lifts and Support of the load As required Failure to cease operation on time or prematurely С See FMEA Lowers while being moved operate could cause damage to vehicle systems. С Left and Support of the load As required Failure to cease operation on time or prematurely See FMEA while being moved operate could cause damage to vehicle systems. Right Forward Support of the load As required Failure to cease operation on time or prematurely С See FMEA and while being moved operate could cause damage to vehicle systems. Reverse Support of the load As required Failure to stop and hold the load could cause damage to С See FMEA Stop and Hold the while being moved vehicle systems. Load С See FMEA E-Stop Remove the power During an Failure to stop the load in an emergency could cause during emergency emergency damage to a vehicle system. to stop all movement of the load.

4.2 FMEA WORKSHEETS

The Failure Modes and Effects Analysis follows.

4.2.1 Passive Components

Passive items are components that may be necessary for the performance of the system but do not change state during critical operations, or static structural members that do not transfer an applied force to an object to make the object move in some manner, unless otherwise accepted in NSTS 22206 as a passive component.

The following components were considered passive in the analysis:

Table 3. Passive Comp	Table 3. Passive Component List				
Item	Rationale				
Static Structural Components	Static structural components do not provide an active function and are considered passive per NSTS 22206 paragraph 4.4.1.a.6				
Hook, Load Block, Wire Rope, Sheaves, Rope Drum, bridge and trolley wheels	These components accepted as passive per NSTS 22206 paragraph 4.5.1.g. However, the drum shafts shall be analyzed as to the attachment method.				

The Hazard Analysis contains passive components that constitute a safety concern.

4.2.2 Wire Harnesses, Cables and Connectors

Wire harnesses, cables, and connectors were not analyzed in the FMEA Table(s) since failure of the electrical functions assessed in Section 4.1 for this system could not result in loss of life or vehicle, (Ref. NSTS 22206, Paragraph 4.4.1.b.2).

4.3 COMPUTER INTERFACE ANALYSIS

This system does not use an LPS, INCS, or KCCS computer interface for control and/or monitoring of critical system functions identified in Section 4.1.

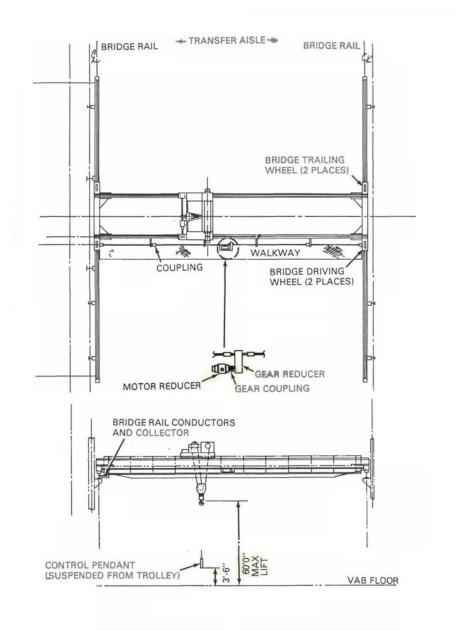


Figure 1. VAB Cell 1, 2 & 4 10 Ton Cranes

		A – VAB Low Bay Checl	•			Pages 12 to 15	
System/Sub PMN: K60-0		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes		Drawing No Reference:	o.: 79K16767 None	
Find No. Part No.	Part Name	Part Function	a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe	Failure Effect On System Performance	V	ailure Effect On ehicle Systems ad/Or Personnel Safety	Crit Cat
None	Hoist Gearbox Assembly	Transmits power from the hoist motor to the wire rope drum.	a. Gear disengagement b. Structural failure of gears, shafts, mechanical load brake components, and the gearbox housing c. 09FY121-002.001 d. Abnormal noises and movements e. None f. Seconds g. NA	Load (Flight Hardware) suspender hoist will drop.	los	ilure could result is (damage) to ght hardware.	2
None	Mechanical Load Brake assembly	The mechanical Load brake holds the load after hoisting as well as controlling the speed during lowering.	Mechanical load brake fails to set	Motor brake is the primary brake brake will stop and hold load whe power is removed by releasing th button.	n	effect.	3
None	Hoist motor Brake Assembly	Device that provides mechanical braking of the hoist. Braking occurs upon removal of power.	Brake does not release	Hoist will not operate.	No	effect.	3
			Motor brake fails to set	Mechanical load brake will hold the Mechanical load brake will stop at load when power is removed by releasing the down button.		effect.	3
None	Spider assembly (U-joint) (2 items)	Transmits motor Torque to and from The drive shaft. Compensates for Misalignment	Structural failure	Hoist will not operate. Motor brak mechanical load brake will hold lo		effect.	3

Table 4. ME	CHANICAL FMEA	A – VAB Low Bay Check	cout Cells 1, 2 and 4			Pages 12 to 15	
						ng No.: 79K16767 nce: None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On ehicle Systems id/Or Personnel Safety	Crit Cat
2	Trolley helical gear parallel shaft reducer	Provide power linkage and mechanical advantage from motor reducer to trolley wheels.	Gear disengages	Trolley stationary: unable to move trolley. Trolley in motion, loss of drive and brake. Weight of trolley assembly will stop motion of troll immediately.	trolley y	effect.	3
3	Trolley double reduction helical gear motor reducer and brake	Provide locomotion for trolley assembly in left/right direction. Transmit power from trolley drive motor to trolley gear drive, reduce motor rotation speed trolley	Mechanical failure of motor	Unable to move trolley.	No	effect.	3
			Reducer gear disengages	Trolley stationary: unable to move trolley. Trolley in motion: loss of drive and brake. Weight of trolley assembly would stop motion of trimmediately.	trolley y	effect.	3
			Motor brake fails to release	Unable to move trolley.	No	effect.	3
			Motor brake fails to set	Loss of trolley brake. Weight of t assembly would stop motion of timmediately.		effect.	3
4	Standard flex gear (2) (coupling)	Provide power linkage from trolley gear reducer to drive wheels.	Structural failure	Loss of torque to one drive whee Trolley may still operate.	I. No	effect.	3

Table 4. ME	Table 4. MECHANICAL FMEA – VAB Low Bay Checkout Cells 1, 2 and 4 Pages 12 to 15						
System/Subsystem: VAB Low Bay Checkout Cells 1, 2 and 4 Bridge Cranes PMN: K60-0931 Drawing No Reference:					ng No.: 79K16767 nce: None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat	
5	Standard flex Gear (coupling)	Provide power linkage from trolley motor reducer to gear reducer.	Structural failure	Unable to move trolley.	No effect.	3	
6	Trolley assembly	Support hoist assembly, provide right/left movement	Wheel bearing seizure	Impart higher torque load into trolley drive train. Possible damage to trolley drive.	No effect.	3	
7	Bridge single reduction helical motor reducer and brake	Provide location for bridge assembly in forward/reverse direction.	Mechanical failure of motor	Unable to move bridge.	No effect.	3	
			Gear disengages	Bridge stationary: unable to move bridge. Bridge in motion: loss of bridge drive and brake. Weight of bridge crane should stop motion of bridge immediately.	No effect.	3	
			Motor brake fails to release	Unable to move trolley.	No effect.	3	
			Motor brake fails to set	Loss of bridge brake. Weight of bridge crane should stop motion of bridge immediately.	No effect.	3	
8	Bridge reducer	Provide power linkage and mechanical advantage from gear reducer to bridge drive wheels.	Gear disengages	Bridge stationary: unable to move bridge. Bridge in motion: loss of bridge drive and brake. Weight of bridge crane should stop motion of bridge immediately.	No effect.	3	

		A – VAB Low Bay Check ay Checkout Cells 1, 2 and 4			Pages 12 to 15 Drawing No. : 79K16767		
PMN: K60-0		T			Reference: None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat	
9	Pillow block	Support bridge drive shaft and maintain alignment.	Bearing seizure	Impart higher torque load into br drive train. Possible damage to b drive.		3	
10	Standard gear coupling	Provide power linkage from bridge drive shaft to bridge drive wheels.	Structural failure	Loss of torque to one drive wheel Bridge may still operate.	I. No effect.	3	
11	Standard gear coupling	Provide power linkage from motor reducer to bridge reducer.	Structural failure	Unable to move bridge.	No effect.	3	
12	Ribbed compression	Provide power linkage from the bridge reducer to the bridge drive shafts and between bridge drive shaft sections.	Structural failure	Loss of torque to one drive wheel Bridge may still operate.	I. No effect.	3	
None	Bridge assembly	Support hoist / trolley assembly, provide forward / reverse movement.	Wheel bearings seizure	Impart higher torque load in brid drive train. Possible damage to b drive.		3	

SAAU9FY	121-002
	RFV. A

Table 5. EL	ECTRICAL FMEA -	· VAB Low Bay Checko	ut Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	Bridge Cranes/Electrical		Drawing N Reference:	o.: 79K16767 : None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On /ehicle Systems nd/Or Personnel Safety	Crit Cat
GULS GLLS	Hoist geared limit switch assembly, upper and lower.	Opens hoist motor circuit when hoist travel exceeds the preset limits of travel	Fails open	Hoist will not operate in the directed.	ction No	effect.	3
			Fails closed	Hoist will not stop at preset limit of tra However, redundancy is provided for limits. In lower limits this failure co occur undetected because the load normally meet the floor surface befor limit switch actuates.	or upper uld will	effect.	3
LS-B	Bridge limit switch, 3 pos.	Opens bridge control circuit when bridge exceeds preset limits of travel in either forward or reverse directions.	Fails open (any one)	Bridge motor will not operate.	No	effect.	3
			Fails closed (any one)	Bridge will not stop at preset limitravel until commanded or until mechanical stops are contacted.	ts of No	effect.	3
LS-T	Trolley limit switch, 3 pos.	Opens trolley control circuit, when trolley exceeds preset limits of travel in either left or right directions.	Fails open (any one)	Trolley motor will not operate.	No	effect.	3
			Fails closed (any one)	Trolley will not stop at preset lim travel until commanded or until mechanical stops are contacted.	its of No	effect.	3

		- VAB Low Bay Checko			Duess	Pages 16 to 41	
PMN: K60-03		Bay Checkout Cells 1, 2 and 4	# Bridge Cranes/Electrical		Drawing No. : 79K16767 Reference : None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	,	Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat
СТ	Transformer, 480-120V	Provides stepped down power source for control logic.	Fails open	All crane functions will be lost. Ho trolley and bridge will not operate		No effect.	3
			Fails shorted	All crane functions will be lost. Hoist, trolley and bridge will not o		No effect.	3
pushbutton cor (remote stop) end	Removes 120V AC from control circuit and de- energizes motor contactor.	Fails open	All crane functions will be lost. Ho trolley and bridge will not operate		No effect.	3	
			Fails closed	Remote stop capability lost. Failur undetectable until use is attempte Normal stop function is unaffected failure resulting in uncontrolled m required.	ed. d. Prior	No effect.	3
S2	Switch, (stop)	Removes 120V AC from control circuit and de- energizes motor contactor.	Fails open	All crane functions will be lost. Ho trolley and bridge will not operate		No effect.	3
			Fails closed	Local stop function lost. Power car removed from motor contactor or circuits. Redundancy is provided (logic	No effect.	3
S10	Switch (start)	Energizes main line contactor and provides power to control circuits.	Fails open	All crane functions will be lost. Ho trolley and bridge will not operate effect if failure occurs during oper	. No	No effect.	3

Table 5. ELE	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	CLV. A
System/Subs PMN: K60-039	•	ay Checkout Cells 1, 2 and 4	Bridge Cranes/Electrical		Drawing No. : 79K16767 Reference : None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On ehicle Systems nd/Or Personnel Safety	Crit Cat
			Fails closed	Motor contactor will remain energi Continuous power supplied to logic circuits.		effect.	3
М	Relay, mainline contactor	Switches 480V 3 phase power to hoist, trolley, and bridge motor control relays.	Relay fails open/short	All crane functions will be lost. Hoi trolley and bridge will not operate		effect.	3
			Aux. contact fails open	Mainline will not remain energized w S10 is released.	hen No	effect.	3
			Aux. contact fails closed	Mainline will be energized without S1 is stop will keep the circuit open.	10. S2 No	effect.	3
			Contact fails open (motor power)	Cannot run the hoist.	No	effect.	3
			Contact fails closed (motor power)	No effect. PSR will stop the hoist p if not all three contacts are closed contact U or D closed also to run t hoist. Several failures required.	. Need	effect.	3
S4	Push-button switch	Energizes control relays for up hoist function	Fails open	Hoist will not operate upward.	No	effect.	3
			Fails closed	Hoist will not cease operation in updirection unless commanded by the stop, remote stop, disconnect swittor upper limit switches.	ie	effect.	3

		- VAB Low Bay Checko				Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing No. : 79K16767 Reference : None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance		Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat
S5	Push-button switch, (hoist down)	Energizes control relays for down hoist function	Fails open	Hoist will not operate downward.		No effect.	3
			a. Fails closed b. Switch sticks, hoist function, welded contacts, broken spring c. 09FY121-002.005 d. Motion fails to stop when commanded e. NA f. Seconds g. NA	Hoist will not cease operation in "downward" direction unless commanded by the stop, remote disconnect switches or limit switce. Close proximity to an obstruction not allow sufficient time for the coto use e-stop.	stop, h. may	Possible damage to flight hardware.	2
S6	Pushbutton switch (trolley right)	Energizes control relays for trolley "right" function	a. Fails closed b. Switch sticks, (trolley- welded contacts, broken spring c. 09FY121-002.005 d. Visual e. NA f. Seconds g. NA	Trolley will not cease operation in direction unless commanded by t stop, remote stop, disconnect swor limit switch. Close proximity to obstruction may not allow sufficient for the operator to use e-stop.	he itches o an	Possible damage to flight hardware.	2
			Fails open	Trolley will not operate in the "rigdirection.	ght"	No effect.	3

	system: VAB Low B	- VAB Low Bay Checko ay Checkout Cells 1, 2 and 4			Pages 16 to 41 Drawing No.: 79K16767 Reference: None		
Find No. Part No.	Part Name	Part Function	a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe	Failure Effect On System Performance	,	Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat
S7	Pushbutton switch (trolley left)	Energizes control relays for trolley, "left" function.	a. Fails closed b. Switch sticks, welded contacts, broken springs c. 09FY121-002.005 d. Motion fails to stop when commanded e. NA f. Seconds g. NA	Trolley will not cease operation in direction unless commanded by t stop, remote stop, disconnect sw or limit switch. Close proximity to obstruction may not allow sufficient for the operator to use e-stop.	he to ritches o an	ossible damage o flight hardware.	2
			Fails open	Trolley will not operate in the "led direction.	ft" N	lo effect.	3
	Energizes control relays for bridge "forward" function.	a. Fails closed b. Switch sticks, welded contacts, broken spring c. 09FY121-002.005 d. Motion fails to stop when commanded e. NA f. Seconds g. NA	Bridge will not cease operation in "forward" direction unless common by the stop, remote stop, discons switches or limit switch. Close proto an obstruction may not allow sufficient time for the operator to stop.	anded to nect oximity	ossible damage o flight hardware.	2	
			Fails open	Bridge will not operate in the forwarde.	ward N	lo effect.	3

System/Sub	system: VAB Low B	 VAB Low Bay Checko ay Checkout Cells 1, 2 and 4 	•			Pages 16 to 41 No.: 79K16767	
Find No. Part No.	Part Name	Part Function	a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe	Failure Effect On System Performance	Reference	Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat
S9	Switch, pushbutton (bridge reverse)	Energizes control relays for bridge "reverse" function.	a. Fails closed b. Switch sticks, welded contacts, broken spring c. 09FY121-002.005 d. Motion fails to stop when commanded e. NA f. Seconds g. NA	Bridge will not cease operation in reverse direction unless comman the stop, remote stop, disconnect operator to react. Switches or lim switch. Close proximity to an obsimay not allow sufficient time for operator to use e-stop.	ded by t nit truction	Possible damage to flight hardware.	2
			Fails open	Bridge will not operate in the revenue.	erse	No effect.	3
UV	of the cranes primary	motor contactor in the event of an undervoltage condition of the cranes primary input power. Also closes	Fails closed	Possible damage to motor windin and/or resistor bank. May occur undetected. Requires dual failure		No effect.	3
			Fails open	All crane functions will be lost. Hois trolley, and bridge will not operate.	t,	No effect.	3
PSR	Phase sequence relay Interrupts 120 AC to motor contactor relay in the event that input 480V AC is phased incorrectly.	Fails closed	Motors in hoist, trolley and bridge operate in reverse direction than commanded. May occur undetect Requires dual failure.		No effect.	3	
			Fails open	All crane functions will be lost. Hois trolley, and bridge will not operate.	t,	No effect.	3

Table 5. ELI	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing No.: 79K16767 Reference: None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	Ve	nilure Effect On ehicle Systems d/Or Personnel Safety	Crit Cat
HOL	Hoist thermal overload relay	Interrupts 480 AC to hoist motor windings in the event of an over temperature condition. Interrupts power to the control cabinet relays.	Fails closed	Possible damage to hoist motor components due to overheating. occur undetected. Requires dual for	May	effect.	3
			Fails open	Hoist motor will not operate.	No	effect.	3
HOLF	Hoist magnetic overload relay	In the event of an overcurrent condition actuates alarm.	Relay fails open	Hoist will not operate.	No	effect.	3
			Relay fails short	Alarm will not sound.	No	effect.	3
			Contact fails open	Alarm will not sound.	No	effect.	3
			Contact fails closed	Alarm will always be on. Nuisance	only.		
TOL	Trolley thermal overload relay (Trolley)	Interrupts 480 AC to trolley motor windings in the event of an over current condition. Interrupts power to the trolley control relays.	Fails closed	Possible damage to trolley motor components due to overheating. Requires dual failure.	No	effect.	3
			Fails open	Trolley motor will not operate.	No	effect.	3
TOLF	Trolley magnetic overload relay	In the event of an overcurrent condition actuates alarm.	Relay fails short	Trolley will not operate.	No	effect.	3
			Relay fails open	Alarm will not sound.	No	effect.	3

Table 5. ELI	ECTRICAL FMEA	- VAB Low Bay Checko	ut Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03	s ystem : VAB Low Ba 91	ay Checkout Cells 1, 2 and 4	Bridge Cranes/Electrical		Drawing N Reference:	l o. : 79K16767 : None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	\ \	ailure Effect On /ehicle Systems nd/Or Personnel Safety	Crit Cat
			Contact fails open	Alarm will not sound.	No	effect.	3
			Contact fails closed	Alarm will always be on. Nuisance	only. No	effect.	3
BOL	Thermal overload bridge	Interrupts 480 AC to bridge motor windings in the event of an over current condition. Interrupts power to the bridge control relays.	Fails closed	Possible damage to bridge motor components due to overheating. Requires dual failure.	No	o effect.	3
			Fails open	Bridge motor will not operate.	No	effect.	3
BOLF	Bridge magnetic overload relay	In the event of an overcurrent condition actuates alarm.	Relay fails open	Bridge will not operate.	No	o effect.	3
			Relay fails short	Alarm will not sound.	No	effect.	3
			Contact fails open	Alarm will not sound.	No	effect.	3
			Contact fails closed	Alarm will always be on. Nuisance	only. No	effect.	3
U	Contactor relay (hoist)	Provides 480v ac power to hoist motor in "up" mode	All contacts fails closed	Hoist will operate upward slow w start button is depressed. Up mo would not cause damage to flight hardware. Stop button or remote stop button	tion	effect.	3
				terminate power.			
			All contacts fails open	Hoist will not operate in the "up"	mode. No	effect.	3

Table 5. EL	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing No.: 79K16767 Reference: None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance		Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat
			Any one contact fails open	Hoist will not operate in the "up" more enough power to move the hoist.	ode. Not N	No effect.	3
			Any one contact fails closed	Hoist will not operate in the "up"	mode.	No effect.	3
			Relay fails open / short	Hoist will not operate in the "up"	mode.	No effect.	3
			N. C. contact fails open	Hoist will not operate in the "dow mode.	n" N	No effect.	3
			N. C. contact fails closed	Loss of safety contact. Requires d failure.	lual N	No effect.	3
D 2200R- EBR230AA	Contactor relay (hoist)	Provides 480v ac power to hoist motor in "down" mode	a. All Relay contactors fail activated b. Relay sticks welded contacts. c. 09FY21-002.006 d. Motion fails to stop when commanded e. None f. Seconds g. NA	Hoist will operate downward slow w start button is depressed or continu operate at minimum speed when do button is released. Stop button mus depressed to deactivate. Close prov to an obstruction may not allow sufficient time for the operator to stop.	e to toown st be ximity	Possible damage o flight hardware.	2
			All contacts fails open	Hoist will not operate in the "down mode.	n" N	No effect.	3
			Any one contact fails closed	Hoist will not move. The brake wo release. Brake is 2-phase brake.	ould not N	No effect.	3

Table 5. ELE	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-039		ay Checkout Cells 1, 2 and	4 Bridge Cranes/Electrical		Drawing No. : 79K16767 Reference : None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On Jehicle Systems nd/Or Personnel Safety	Crit Cat
			Any one contacts fails open	Hoist may operate downward wh start button is depressed. Howev will be at a very slow speed not to cause hardware damage.	er it	effect.	3
			Relay fails open / short	Hoist will not operate in the "dow mode.	vn" No	effect.	3
			N. C. contact fails open	Hoist will not operate in the "up"	mode. No	effect.	3
			N. C. contact fails closed	Loss of safety contact. Requires of failure.	dual No	effect.	3
TR 2200R- EBR230AA	Contactor relay (Trolley)	Provides 480V AC power to trolley motor in "right" mode.	a. All contacts fail closed b. Relay sticks/welded contact c. 09FY121-002.006 d. Motion fails to stop when commanded e. NA f. Seconds g. NA	Trolley will operate "right" whenestart button is depressed or cont operate at minimum speed when right button is released. Close proto an obstruction may not allow sufficient time for the operator to stop.	inue to trolley oximity	ssible damage flight hardware.	2
			All Contacts fail open	Trolley will not operate in the "rigmode.	ght" No	effect.	3
			Any one contact fails closed	Trolley will not move. The brake not release. Brake is 3-phase bra		effect.	3
			Any one contacts fails open	Trolley may move right wheneve button is depressed. However, it at a very slow speed not enough cause hardware damage.	will be	effect.	3

		- VAB Low Bay Checke				Pages 16 to 41	
System/Sub PMN: K60-03	_	ay Checkout Cells 1, 2 and	4 Bridge Cranes/Electrical		Drawing N Reference:	o.: 79K16767 None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On ehicle Systems nd/Or Personnel Safety	Crit Cat
			Relay fails open / short	Trolley will not operate in the "rigmode.	ght" No	effect.	3
			N. C. contact fails open	Hoist will not move "left".	No	effect.	3
			N. C. contact fails closed	Loss of safety contact. Requires failure.	dual No	effect.	3
TL 2200R- EBR230AA	Contactor relay (Trolley)	Provides 480V AC power to trolley motor in "left" mode.	a. All contacts fail closed b. Relay sticks/welded contact c. 09FY121-002.006 d. Motion fails to stop when commanded e. NA f. Seconds g. NA	Trolley will operate "left" whenever start button is depressed or continumove left at minimum speed when left button is released. Close proxi an obstruction may not allow suftime for the operator to use e-step.	ue to to trolley mity to ficient	ssible damage flight hardware.	2
			All contacts fail open	Trolley will not operate in the "le mode.	ft" No	effect.	3
			Any one contact fails closed	Trolley will not move. The brake not release. Brake is 3-phase bra		effect.	3
			Any one contacts fails open	Trolley may move left whenever button is depressed. However, it at a very slow speed not enough cause hardware damage.	will be	effect.	3
			Relay fails open / short	Trolley will not move "left" mode	. No	effect.	3
			N. C. contact fails open	Trolley will not move "right".	No	effect.	3

Table 5. EL	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and	4 Bridge Cranes/Electrical		Drawing N Reference:	o.: 79K16767 None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On ehicle Systems nd/Or Personnel Safety	Crit Cat
			N. C. contact fails closed	Loss of safety contact. Requires failure.	dual No	effect.	3
BF 2200R- EBR230AA	Contactor relay (bridge)	Provides 480V AC power to bridge motor in "forward" mode.	a. All contacts fail closed b. Relay sticks/welded contact c. 09FY121-002.006 d. Motion fails to stop when commanded e. NA f. Seconds g. NA	Bridge will operate "forward" when start button is depressed or continumove forward at minimum speed whidge forward button is released. It is proximity to an obstruction may allow sufficient time for the operation use e-stop.	ue to to vhen Close not	ssible damage flight hardware.	2
			All contacts fail open	Bridge will not operate in "forwal mode.	rd" No	effect.	3
			Any one contact fails closed	Bridgewill not move. The brake was not release. Brake is 3-phase brake		effect.	3
			Any one contacts fails open	Bridge may move forward whenestart button is depressed. However will be at a very slow speed not to cause hardware damage.	er, it	effect.	3
			Relay fails open / short	Trolley will not move "forward".	No	effect.	3
			N. C. contact fails open	Trolley will not move in "reverse	". No	effect.	3
			N. C. contact fails closed	Loss of safety contact. Requires failure.	dual No	effect.	3

Table 5. ELI	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing No Reference:	o.: 79K16767 None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On ehicle Systems ad/Or Personnel Safety	Crit Cat
BR 2200R- EBR230AA	Contactor relay (bridge)	Provides 480V AC power to bridge motor in "reverse" mode.	a. Fails activated b. Relay sticks/welded contact c. 09FY121-002.006 d. Motion fails to stop when commanded e. NA f. Seconds g. NA	Bridge will operate "reverse" whenestart button is depressed or continumove in reverse when bridge reverbutton is released. Close proximity obstruction may not allow sufficient for the operator to use e-stop.	ue to to see y to an	ssible damage flight hardware.	2
			All contacts fail open	Bridge will not operate in "revers mode.	se" No	effect.	3
			Any one contact fails closed	Bridge will not move. The brake not release. Brake is 3-phase brake		effect.	3
			Any one contacts fails open	Bridge may move reverse whene start button is depressed. Howev will be at a very slow speed not to cause hardware damage.	er, it	effect.	3
			Relay fails open / short	Bridge will not operate in "revers mode.	se" No	effect.	3
			N. C. contact fails open	Bridge will not move "forward".	No	effect.	3
			N. C. contact fails open	Loss of safety contact. Requires of failure.	dual No	effect.	3

		- VAB Low Bay Checko ay Checkout Cells 1, 2 and		[Pages 16 to 41 Drawing No.: 79K16767	KEV.
Find No. Part No.	Part Name	Part Function	a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe	Failure Effect On System Performance	Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat
DS-1	Switch disconnect (main power switch)	Interrupts 480V primary power to 10 ton cane. First, downstream disconnect from facility power panel.	Fails open	All crane functions will be lost. Hoist, trolley, and bridge will not operate.	No effect.	3
			Fails closed	Loss of ability to disconnect primal power at closest point to operator. Power shut-off must occur at facili power panel.		3
	Switch disconnect (main disconnect switch)	Interrupts 480V primary power to crane system. Electrically upstream of feedrails. Second downstream disconnect from facility power panel.	Fails open	All crane functions will be lost. Hoi trolley, and bridge will not operate	· ·	3
			Fails closed	Ability to disconnect primary power upstream of feed rails will be lost. Power shut-off must occur at facili power panel.		3
(main disconnect mounted on walkway)	Interrupts 480V primary power to crane system. Electrically upstream of feedrails. Third downstream disconnect from facility power panel.	Fails open	All crane functions will be lost. Hoist, trolley, and bridge will not operate.	No effect.	3	
			Fails closed	Ability to disconnect primary power upstream of feed rails will be lost. Power shut-off must occur at facili power panel.		3

Table 5. ELE	ECTRICAL FMEA	- VAB Low Bay Checko	ut Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-039	9	ay Checkout Cells 1, 2 and 4	Bridge Cranes/Electrical		awing No ference:	.: 79K16767 None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	Ve	ilure Effect On chicle Systems d/Or Personnel Safety	Crit Cat
Gong	Alarm	Audible alarm to signal actuation of overcurrent sensing relays in hoist, trolley, and bridge motor circuits.	Inoperative	No audible indication of overcurrent relay actuation in hoist, trolley, or bridg May occur undetected, but, obvious degradation of system performance valert operator of malfunction. Overcurrent relays will disable malfunctioning circuit and preclude continued operation during an overcurrent condition.	ge.	effect.	3
FU1	Fuse 1.4A	Current protection for control logic circuit.	Fails open	Loss of power to control circuits. Crawill not function.	ne No	effect.	3
			Fails closed	Circuits protected by upstream break in facility power panel.	kers No	effect.	3
FU2	Fuse 3A	Current protection for trolley motor circuit.	Fails open	Loss of power to trolley control circui Trolley will not operate.	its. No	effect.	3
			Fails closed	Loss of current overload protection. Circuit protected by upstream breake Requires double failure.		effect.	3
FU3	Fuse 3A	Current protection for bridge motor circuit.	Fails open	Loss of power to bridge control circui Bridge will not operate.	its. No	effect.	3
			Fails closed	Loss of current overload protection. Circuit protected by upstream breake Requires dual failure.		effect.	3

Table 5. ELI	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing N Reference	lo. : 79K16767 : None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	١ ١	Failure Effect On Vehicle Systems nd/Or Personnel Safety	Crit Cat
HRB	Resistor bank (hoist)	Provides torque/ speed control. Electrically and incrementally as pushbuttons S4-S5 are depressed	Any one leg fails open	Leg M1 or M2, total loss of speed M3 speeds 2-5 slower than norm Relay logic may bypass open as I speeds are selected.	al.	o effect.	3
			Any one leg fails shorted	Selected speed may be higher th normal. Relay logic may bypass shigher speeds are selected.		o effect.	3
TRB	Resistor bank (trolley)	Provides torque/ speed control. Electrically and incrementally bypassed as pushbuttons S6 and S7 are depressed.	Any one leg fails open	Leg M1 or M2, total loss of speed M3 speeds 2-5 slower than norm Relay logic may bypass open as I speeds are selected.	al.	o effect.	3
			Any one leg fails shorted	Selected speed may be higher th normal. Relay logic may bypass shigher speeds are selected.		o effect.	3
BRB	Resistor bank (bridge)	Provides torque/ speed control. Electrically and incrementally bypassed as pushbuttons S8 or S9 are depressed.	Any one leg fails open	Leg M1 or M2, total loss of speed Leg M3 speeds 2-5 slower than n Relay logic may bypass open as I speeds are selected.	ormal.	o effect.	3
			Any one leg fails shorted	Selected speed may be higher th normal. Relay logic may bypass shigher speeds are selected.		o effect.	3
2A	Contactor relay (hoist) Speed-2	Resistor bank bypass	Relay fails open / short	Loss of speed 2.	N	o effect.	3

	system: VAB Low B	- VAB Low Bay Checko ay Checkout Cells 1, 2 and			Pages 16 to 41 Drawing No.: 79K16767 Reference: None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	Fa Ve	nilure Effect On ehicle Systems d/Or Personnel Safety	Crit Cat
			Either contact fails closed	No effect. Dual failure of both con required.	tacts No	effect.	3
			Either contact fails open	Loss of speed 2.	No	effect.	3
TD	Time delay relay (hoist) speed-3	Time delay for resistor bank bypass	Relay fails open / short	Loss of speeds 3, 4, & 5.	No	effect.	3
			Contact fails open	Loss of speeds 3, 4, & 5.	No	effect.	3
			Contact fails closed	Speeds 1 & 2 bypassed during state acceleration to speeds 3-5. Speed bypassed when going from speed speeds 3 to 5.	12	effect.	3
3A	Relay, contactor (hoist) (speed 3)	Resistor bank bypass	Relay fails open / short	Loss of speed 3. Other speeds unaffected.	No	effect.	3
			All contacts fails closed	Hoist may operate at higher speed commanded. Hoist will operate at 3 when speed 1, 2 or 3 is command Speed 4 and 5 unaffected. See groundrule 3a.	speed	effect.	3
			All contacts fails open	Loss of speed 3. Other speeds unaffected.	No	effect.	3

Table 5. ELI	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-039		ay Checkout Cells 1, 2 and	4 Bridge Cranes/Electrical		Drawing No Reference:	o.: 79K16767 None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On ehicle Systems d/Or Personnel Safety	Crit Cat
			Any one contact fails closed	Speed 1 and 2 higher than normal Speeds 3, 4, and 5 unaffected. Segroundrule 3a.		effect.	3
			Any one contact fails open	Loss of speed 3. Speed 3 is lower th normal	nan No	effect.	3
TD1	Time delay relay (hoist) speed-4	Time delay for resistor bank bypass	Relay fails open / short	Loss of speeds 4 and 5. Other speunaffected.	eeds No	effect.	3
			Contact fails closed	The delay between speeds 3 and not occur.	4will No	effect.	3
			Contact fails open	Loss of speeds 4 and 5. Other speunaffected.	eeds No	effect.	3
4A	Contactor relay (hoist) speed-4	Resistor bank bypass	Relay fails open / short	Loss of speed 4. Other speeds unaffected.	No	effect.	3
			Contact fails closed	Hoist may operate at higher spee commanded. Hoist will operate at 4 when speed 1, 2, 3 or 4 is commanded. Speed 5 unaffected. See groundrule 3a.	speed	effect.	3
			Contact fails open	Loss of speed 4. Other speeds unaffected.	No	effect.	3
			Any one contact fails closed	Speeds 1, 2 and 3 higher than no Speeds 4 and 5 unaffected. See groundrule 3a.	rmal. No	effect.	3

Table 5. EL	ECTRICAL FMEA	- VAB Low Bay Checke	out Cells 1, 2 and 4			Pages 16 to 41	XLV. A
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and	4 Bridge Cranes/Electrical		Drawing No. : 79K16767 Reference : None		
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	,	Failure Effect On Vehicle Systems .nd/Or Personnel Safety	Crit Cat
			Any one contact fails open	Loss of speed 4. Other speeds unaffected. Speed four is lower th normal.		o effect.	3
TD2	Time delay relay (hoist) speed-5	Time delay for resistor bank bypass	Relay fails open / short	Loss of speed five.	N	o effect.	3
			Contact fails closed	The delay between speeds 4 and not occur.	5 will N	o effect.	3
			Contact fails open	Loss of speed 5.	N	o effect.	3
5A	Contactor relay (hoist) speed-5	Resistor bank bypass	Relay fails open / short	Loss of speed 5. Other speeds unaffected.	N	o effect.	3
			All contacts fails closed	Hoist will operate at speed 5 at al See groundrule 3a.	I times. N	o effect.	3
			All contacts fails open	Loss of speed 5. Other speeds unaffected.	N	o effect.	3
			Any one contact fails closed	Speeds 1, 2, 3, and 4 higher than normal. Speed 5 unaffected. See groundrule 3a.	N	o effect.	3
			Any one contact fails open	Loss of speed 5. Other speeds unaffected. Speed 5 lower than no		o effect.	3
Р	Contactor relay (trolley) speed-3	Resistor bank bypass	Relay fails open / short	Loss of speed 2 other speeds una	ffected. N	o effect.	3

		 VAB Low Bay Check Checkout Cells 1, 2 and 			Drawing No	Pages 16 to 41 D.: 79K16767	
PMN: K60-03 Find No. Part No.	•	Part Function	a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe		Reference:		Crit Cat
			Contact fails closed	Trolley may operate at higher spe than commanded. Trolley will ope speed 2 when speed 1 is selected speeds unaffected. See groundrule	rate at . Other	effect.	3
			Contact fails open	Loss of speed 2 other speeds unaf	ffected. No	effect.	3
			Relay fails open/short	Loss of overcurrent protection. Po damage to GSE.	ssible No	effect.	3
TD5	Time delay relay (trolley) speed-3	Time delay for resistor speed 3 to begin.	Relay fails open / short	Loss of speeds 3, 4, and 5.	No	effect.	3
	(managy special	ор от	Contact fails closed	The delay between speeds 2 and 3 not occur.	3 will No	effect.	3
			Contact fails open	Loss of speeds 3, 4, and 5.	No	effect.	3
3A1	Contactor relay (trolley) speed-3	Resistor bank bypass	Relay fails open / short	Loss of speed 3. Other speeds unaffected.	No	effect.	3
		Contact fails closed	Trolley may operate at higher speed commanded. Trolley will operate at when speed 1, 2 or 3 is commanded. Speed 4 and 5 unaffected. See grou 3a.	speed 3	effect.	3	
			Contact fails open	Loss of speed 3. Other speeds unaffected.	No	effect.	3
			Any one contact fails closed	Speed 1 and 2 higher than norma Speeds 3, 4, and 5 unaffected. Se groundrule 3a.		effect.	3

System/Sub	system: VAB Low B	- VAB Low Bay Check Bay Checkout Cells 1, 2 and			Pages 16 to 41 Drawing No.: 79K16767	
PMN: K60-03 Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	Failure Effect On Vehicle Systems And/Or Personne Safety	
			Any one contact fails open	Speed 3 lower than normal. All oth speed unaffected.	her No effect.	3
TD6	Time delay relay (trolley) speed-4	Time delay for resistor bank bypass	Relay fails open / short	Loss of speeds 4 and 5.	No effect.	3
		ş.	Contact fails closed	The delay between speeds 3 and 4 not occur.	4 will No effect.	3
			Contact fails open	Loss of speeds 4 and 5.	No effect.	3
4A1	Relay (trolley) speed-4	Resistor bank bypass	Relay fails open / short	Loss of speed 4. Other speeds unaffected.	No effect.	3
			All contacts fail closed	Trolley may operate at higher Speed than commanded. Trolley voperate at speed 4 when speed 1, or 4 is commanded. Speed 5 unaf See groundrule 3a.	2, 3	3
			All contacts fail open	Loss of speed 4. Other speeds unaffected.	No effect.	3
			Any one contact fails closed	Speeds 1, 2 and 3 higher than nor Speeds 4 and 5 unaffected. See groundrule 3a.	rmal. No effect.	3
			Any one contact fails open	Speed 4 lower than normal. All oth speeds unaffected.	her No effect.	3
TD7	Time delay relay (trolley) sped-5	Time delay for resistor bank bypass	Relay fails open / short	Loss of speed 5	No effect.	3
	, , , , , , , , , , , , , , , , , , , ,		Contact fails closed	The delay between speeds 4 and 5 not occur.	5 will No effect.	3

REV. A

Table 5. ELI	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing No Reference:	o.: 79K16767 None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On ehicle Systems id/Or Personnel Safety	Crit Cat
			Contact fails open	Loss of speed 5	No	effect.	3
5A1	Contactor relay (trolley) speed-5	Resistor bank bypass	Relay fails open / short	Loss of speed 5. Other speeds unaffected.	No	effect.	3
			All contacts fail closed	Trolley will operate at speed 5 at times. See groundrule 3a.	all No	effect.	3
			All contacts fail open	Loss of speed 5. Other speeds unaffected.	No	effect.	3
			Any one contact fails closed	Speeds 1, 2, 3, and 4 higher that normal. Speed 5 unaffected. See groundrule 3a.		effect.	3
			Any one contact fails open	Loss of speed 5. Other speeds unaf Speed 5 is slower than normal.	fected. No	effect.	3
P1	Contactor relay (bridge)	Resistor bank bypass	Relay fails open / short	Loss of speed 2 other speeds una	affected. No	effect.	3
	(c.rage)		Contact fail closed	Bridge may operate at higher spethan commanded. Bridge will ope speed 2 when speed 1 is selected speed unaffected. See groundrule	erate at d. Other	effect.	3
			Contact fail open	Loss of speed 2 other speeds una	affected. No	effect.	3
TD10	Time delay relay (bridge) speed-3	Time delay for resistor bank bypass	Relay fails open / short	Loss of speeds 3, 4, and 5.	No	effect.	3

REV. A

Table 5. ELE	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-039		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing N Reference	o.: 79K16767 : None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	\	ailure Effect On /ehicle Systems nd/Or Personnel Safety	Crit Cat
			Contact fails closed	The delay between speeds 2 and not occur.	3 will No	effect.	3
			Contact fails open	Loss of speeds 3, 4, and 5.	No	effect.	3
3A2	Contactor relay (bridge) speed-3	Resistor bank bypass	Relay fails open / short	Loss of speed 3. Other speeds unaffected.	No	effect.	3
			All contacts fail closed	Bridge may operate at higher spethan commanded. Bridge will ope speed 3 when speed 1, 2 or 3 is commanded. Speed 4 and 5 unat See groundrule 3a.	erate at	o effect.	3
			All contacts fail open	Loss of speed 3. Other speeds unaffected.	No	effect.	3
			Any one contact fails closed	Speed 1 and 2 higher than norm. Speeds 3, 4, and 5 unaffected. S groundrule 3a.		o effect.	3
			Any one contact fails open	Speed 3 lower than normal. Other speeds unaffected.	er No	effect.	3
TD11	Time delay relay (bridge) speed-4	Time delay for resistor bank bypass	Relay fails open / short	Loss of speeds 4 and 5.	No	effect.	3
			Contact fails closed	The delay between speeds 3 and not occur.	4 will No	effect.	3
			Contacts fail open	Loss of speeds 4 and 5.	No	effect.	3

REV. A

Table 5. ELI	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	XLV. A
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing No Reference:	o.: 79K16767 None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	V	ailure Effect On ehicle Systems d/Or Personnel Safety	Crit Cat
4A2	Contactor relay (bridge) speed-4	Resistor bank bypass	Relay fails open / short	Loss of speed 4. Other speeds unaffected.	No	effect.	3
			All contacts fail closed	Bridge may operate at higher speed commanded. Bridge will operate at when speed 1, 2, 3 or 4 is comman Speed 5 unaffected. See groundrul	speed 4 ded.	effect.	3
			All contacts fail open	Loss of speed 4. Other speeds unaffected.	No	effect.	3
			Any one contact fails closed	Speeds 1, 2 and 3 higher than no Speeds 4 and 5 unaffected. See groundrule 3a.	ormal. No	effect.	3
			Any one contact fails open	Speed 4 lower than normal other unaffected.	speeds No	effect.	3
TD12	Time delay relay (bridge)	Time delay for resistor bank bypass	Relay fails open / short	Loss of speed 5	No	effect.	3
			Contact fails closed	The delay between speeds 4 and not occur.	5 will No	effect.	3
			Contact fail open	Loss of speed 5	No	effect.	3
5A2	Relay (bridge) 5-speed	Resistor bank bypass	Relay fails open / short	Loss of speed 5. Other speeds unaffected.	No	effect.	3
			All contacts fail closed	Will operate at speed 5 at all time groundrule 3a.	es. See No	effect.	3


						R	REV. A
Table 5. ELI	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4			Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		Drawing N Reference	No. : 79K16767 e: None	
Find No. Part No.	Part Name	Part Function	a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe	Failure Effect On System Performance	,	Failure Effect On Vehicle Systems and/Or Personnel Safety	Crit Cat
			All contacts fail open	Loss of speed 5. Other speeds unaffected.	N	lo effect.	3
			Any one contact fails closed	Speeds 1, 2, 3, and 4 higher tha normal. Speed 5 unaffected. See groundrule 3a.		lo effect.	3
			Any one contact fails open	Speed 5 slower than normal. Other speeds unaffected.	N	lo effect.	3
PR	Relay, magnetic current (trolley)	Motor circuit overcurrent protection. Removes voltage to control logic relays.	Relay fails open / short	Loss of overcurrent cutout. Possi damage to motor during overcur condition. May occur undetected	rent	lo effect.	3
			Contact fails open	Trolley will operate in speed 1 or	nly. N	lo effect.	3
			Contact fail closed	Loss of overcurrent cutout. Possi damage to motor during overcur condition. May occur undetected	rent	lo effect.	3
PR1	Relay, magnetic current (bridge)	Motor circuit Overcurrent protection. Removes voltage to control logic relays.	Relay fails open / short	Loss of overcurrent cutout. Possi damage to motor during overcur condition. May occur undetected	rent	lo effect.	3
			Contact fails open	Bridge will operate in speed 1 on	ıly. N	lo effect.	3
			Contact fail closed	Loss of overcurrent cutout. Possi damage to motor during overcur condition. May occur undetected Requires double failure.	rent	lo effect.	3

Table 5. EL	ECTRICAL FMEA	- VAB Low Bay Checko	out Cells 1, 2 and 4		Pages 16 to 41	
System/Subs PMN: K60-03		ay Checkout Cells 1, 2 and 4	4 Bridge Cranes/Electrical		ng No.: 79K16767 ence: None	
Find No. Part No.	Part Name	Part Function	 a. Failure Mode b. Cause c. FMN d. Detection Method e. Correcting Action f. Time to Effect g. Timeframe 	Failure Effect On System Performance	Failure Effect On Vehicle Systems And/Or Personnel Safety	Crit Cat
M1	Hoist motor	Provides torque to turn the hoist drum	Inoperable	Hoist will not operate. Brakes will engage if failure occurs during operations.	No effect.	3
M2	Trolley motor	Provides torque to turn the trolley wheels	Inoperable	Trolley will not operate.	No effect.	3
M3	Bridge motor	Provides torque to turn the bridge wheels	Inoperable	Bridge will not operate.	No effect.	3
KS1	Bypass key switch	When the final upper limit switch is tripped this allows the hoist to be powered to lower the hook. Locks out "U" up relay.	N O Side Fails open	Normal position until tripped by FUL. Unable to lower the load or hook when the FUL is tripped.	No effect.	3
			N O Side Fails closed	Cannot move the hoist up due to the circu opened by KS1 switch.	No effect.	3
FULS	Final Upper Limit switch	Final limit switch. Weighted switch on wire rope hook. Deenergizes mainline contactor to prevent two-blocking.	Fails open	Cannot power the hoist.	No effect.	3
			Fails closed	Loss of safety switch to prevent two- blocking. Requires prior failure of GULS.	No effect.	3

Appendix A. FAULT TREE AND HAZARD ANALYSIS

The Fault Tree Analysis and Hazard Analysis Worksheets follow.

There are no Hazard Reports associated with this system.

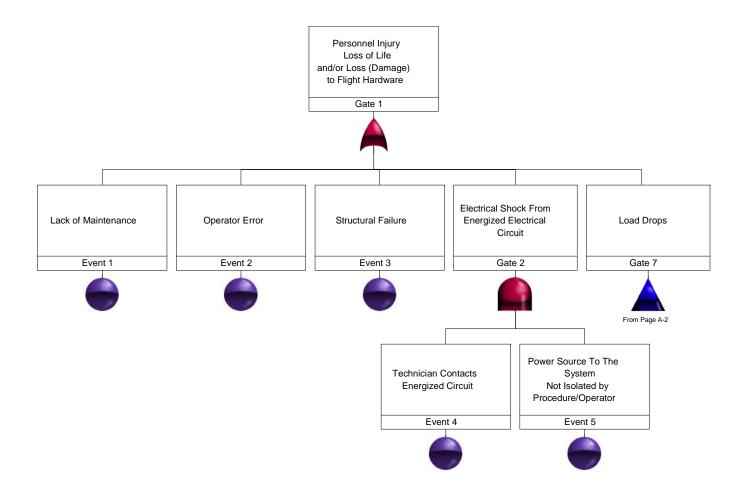

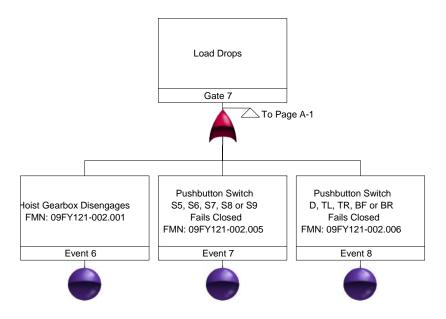


Table 6. Hazard Analysis Wor	ksheet –	VAB Low Bay 10 Ton Cranes	Pages A-3 to A-3
System/Subsystem: VAB Low Bay	Checkout (Cells 1, 2 and 4 Bridge Cranes	Location:
Gate No. Hazardous Condition	Severity	Event No. Event Nomenclature (Hazard Cause)	Safety Requirements & Hazard Cause Control Provision/Verification
Gate 1 Personnel Injury/Loss of life and/or Loess (Damage) to Flight hardware	CA	Event 1 Lack of Maintenance	Annual maintenance of hoist gearbox includes inspection for damage/corrosion, loose fasteners, oil leakage, oil level and oil sampling per OMI Q6166.
	CA	Event 2 Operator Error	Operator error is minimized through proper training and certification. Proper certification verified per OMI V5087.
	CA	Event 3 Structural Failure	Load test performed annually per OMI Q6166.
	CA	Event 4 Technician Contacts Energized Circuit	Operator error is minimized through proper training and certification. Proper certification verified per OMI V5087.
	CA	Event 5 Power Source To The System Not Isolated by Procedure/Operator	KNPR 8715.3 "KSC Safety Practices Procedural Requirements", USA Ground Operations Operating Procedure, USA002433 "Lockout/Tagout and Do Not Use or Operate Programs" states that all affected, authorized, and other employees shall annually complete two training courses: QG20A-LSC, "Site/Area Specific Safety Training and QG111-LSC, "Lockout/Tagout". Personnel will lockout and tag any system prior to de-energization.
	CR	Event 6 Hoist Gearbox Disengages FMN: 09FY121-002.001	See CIL Sheet
	CR	Event 7 Pushbutton Switch, S5, S6, S7, S8 or S9 Fails Closed FMN: 09FY121-002.005	See CIL Sheet
	CR	Event 8 Relay D, TL, TR, BF or BR Contacts Fail Closed FMN: 09FY121-002.006	See CIL Sheet

Appendix B. CRITICAL ITEMS LIST

Critical Item: Pushbutton Switch

NASA Part No: None

Criticality Category: 2

Total Quantity: 15

Mfg/Part No: Duct-O-Wire / PB-5

System: 010-Ton Bridge Crane

Find No.	Qty	Area	PMN	Baseline	Drawing / Sheet
S5	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
S5	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
S5	1	VAB CC-4	K60-0531	389.00	79K16767 / 3
S6	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
S6	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
S6	1	VAB CC-4	K60-0531	389.00	79K16767 / 3
S7	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
S7	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
S7	1	VAB CC-4	K60-0531	389.00	79K16767 / 3
S8	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
S8	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
S8	1	VAB CC-4	K60-0531	389.00	79K16767 / 3
S9	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
S9	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
S9	1	VAB CC-4	K60-0531	389.00	79K16767 / 3

Function:

Energizes control relays for trolley or bridge and hoist down function.

Failure Mode No. Failure Mode	Failure Cause Failure Effect	Detection Method Time to Effect	Crit Cat
09FY121-002.005	Switch sticks, hoist function, welded contacts, broken spring	Audible, Visual	2
Fails closed	Hoist, trolley or bridge will not cease operation in the last commanded direction unless commanded by the stop, remote stop, disconnect switches or a limit switch. Possible loss (damage) to flight hardware if close proximity to an obstruction.	Seconds	

ACCEPTANCE RATIONALE

Design:

- Two push button switches per module, two blades per switch, six contact balls per switch.
- NEMA 4 contacts, 120 VAC, 0.25 amps continuous, 1.9 amps intermittent.

Test:

- Pre-operational set up to support lifting operations in OMI V5087 verifies proper operation of crane components and all functions.
- A full operational check of the crane is performed monthly (no load) in accordance with OMI Q6166.
- An operational check of the crane is performed under full rated load as part of the annual load test in accordance with OMI Q6166.
- OMRSD File VI requires annual performance of an operational test at rated load.

• Reliability testing was performed by the manufacturer. This type switch was subjected to over 500,000 cycles without failure.

Inspection:

• The pendant control is visually inspected monthly for missing nomenclature and physical damage such as loose screws, torn dust covers or damage pushbuttons in accordance with OMI Q6166.

Failure History:

- Current data on test failures, unexplained anomalies, and other failures experienced during ground processing activities can be found in the PRACA database. The PRACA database was researched and no data was found on this component in the critical failure mode.
- The GIDEP database was researched and no data was found on this component in the critical failure mode.

Operational Use:

Correcting Action	Timeframe
There is no action which can be taken to mitigate the failure	Since no correcting action is available,
effect.	timeframe does not apply.

Rev. A

USA Ground Operations CIL Sheet

Critical Item:Contactor RelayCriticality Category:2NASA Part No:NoneTotal Quantity:15

Mfg/Part No: Telemecanique(ITE) / 2200R-EBR230AA

System: 010-Ton Bridge Crane

Find No.	Qty	Area	PMN	Baseline	Drawing / Sheet
BF	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
BF	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
BF	1	VAB CC-4	K60-0531	389.00	79K16767 / 3
BR	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
BR	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
BR	1	VAB CC-4	K60-0531	389.00	79K16767 / 3
D	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
D	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
D	1	VAB CC-4	K60-0531	389.00	79K16767 / 3
TL	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
TL	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
TL	1	VAB CC-4	K60-0531	389.00	79K16767 / 3
TR	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
TR	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
TR	1	VAB CC-4	K60-0531	389.00	79K16767 / 3

Function:

Energizes control relays for trolley or bridge and hoist down function.

Failure Mode No. Failure Mode	Failure Cause Failure Effect	Detection Method Time to Effect	Crit Cat
09FY121-002.006	Relay sticks welded contacts.	Audible, Visual	2
All Relay contactors fail activated	Hoist, trolley or bridge will not cease operation in the last commanded direction unless commanded by the stop, remote stop, disconnect switches or a limit switch. Possible loss (damage) to flight hardware if close proximity to an obstruction.	Seconds	

ACCEPTANCE RATIONALE

Design:

- Three pole reversing contactor.
- Coil: 120V AC
- Contacts: 480V AC, 2.3 amps, made from silver silver cadmium oxide material.

Test:

- Pre-operational set up to support lifting operations in OMI V5087 verifies proper operation of crane components and all functions.
- A full operational test of the crane is performed monthly (no load) in accordance with OMI Q616.
- An operational check of the crane is performed under full rated load as part of the annual load test in accordance with OMI Q6166.
- OMRSD File VI requires annual performance of an operational test at rated load.

Inspection:

• Relay contactors are inspected for wear and pitting monthly in accordance with OMI 46166.

Failure History:

- Current data on test failures, unexplained anomalies, and other failures experienced during ground processing activities can be found in the PRACA database. The PRACA database was researched and no data was found on this component in the critical failure mode.
- The GIDEP database was researched and no data was found on this component in the critical failure mode.

Operational Use:

Correcting Action	Timeframe
There is no action which can be taken to mitigate the failure	Since no correcting action is available,
effect.	timeframe does not apply.

Critical Item: Hoist Gearbox Assembly

NASA Part No: None

Criticality Category: 2

Total Quantity: 3

Mfg/Part No: Yale Engineering Co. / LE10G40FB10

System: 010-Ton Bridge Crane

Find No.	Qty	Area	PMN	Baseline	Drawing / Sheet
None	1	VAB CC-1	K60-0531	389.00	79K16767 / 3
None	1	VAB CC-2	K60-0531	389.00	79K16767 / 3
None	1	VAB CC-4	K60-0531	389.00	79K16767 / 3

Function:

Transmits power from the hoist motor to the wire rope drum.

Failure Mode No. Failure Mode	Failure Cause Failure Effect	Detection Method Time to Effect	Crit Cat
09FY121-002.001	Structural failure of gears, shafts, mechanical load brake components, and the gearbox housing	Audible, Visual	2
Gear disengagement	Load (Flight Hardware) suspended from hoist will drop.	Seconds	

ACCEPTANCE RATIONALE

Design:

- The gear box is an off-the-shelf item manufactured by Yale Industries. Its design complies with Crane Manufacturers Association of America (CMAA) specification # 70.
- All gearing design is based upon AGMA standards 220.02, "Rating of the Strength of Spur Gear Teeth" and 210.02, "Surface Durability (pitting) of Spur Gear Teeth."
- The gears are splined to shafts or integrally machined and are retained in place by shoulders within the confines of the gearbox.
- Load bearing members, such as the gear case and shafts, have been designed so that the calculated static stress, based upon the rated load, does not exceed 20% of the average ultimate strength of the material, i.e. 5:1 factor of safety.

Test:

- Pre-operational set up to support lifting operations in OMI V5087 verifies proper operation of crane components and all functions.
- A load test at 100% of rated load is performed annually by OH1 Q6166 in accordance with NASA-STD-8719.9 requirement.
- OMRSD File VI requires annual performance of a rated load test to verify system integrity.
- •An annual operational check of the hoist is performed under full rated load in accordance with OMI 46166.
- •A full operational check of the hoist is performed monthly (no load) in accordance with OMI Q6166.

Inspection:

• The hoist gearbox is checked annually per OMI No. Q6166 for damage, corrosion, loose fasteners, oil leakage, oil level.

Failure History:

- Current data on test failures, unexplained anomalies, and other failures experienced during ground processing activities can be found in the PRACA database. The PRACA database was researched and no data was found on this component in the critical failure mode.
- The GIDEP database was researched and no data was found on this component in the critical failure mode.

Operational Use:

Correcting Action	Timeframe
There is no action which can be taken to mitigate the failure	Since no correcting action is available,

effect.	timeframe does not apply.